


Instructions

Tools Required: Screw & Screwdriver (Not provided with kit)

- 1. Refer to your OEM instructions on how to safely remove the old floor register.
- 2. Remove your old floor register (A) and discard. Do not discard the old screws (B).
- 3. Measure your floor duct opening size (C).
- 4. Select the appropriate floor register for your need. Danco offers 4 different sizes. Always choose a size slightly bigger than the duct opening itself. For example, if your duct size is 3 1/2" X 9 1/4" then choose the 4" width X 9 3/4" length (62068).
- 5. Install new register into your floor opening using the screws as shown on Image I. Note: Some ducts don't require the screws to hold register in place. If your duct opening doesn't have screw holes, then simply set the register into the floor opening.
- 6. Adjust the damper handle as desired.

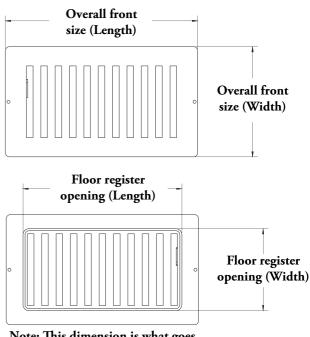

Note: This dimension is what goes into the floor duct opening

Danco	Actual floor opening size	Overall front size	Depth
62067	4" width x 7-3/4" length	5-3/8" width x 9-3/8" length	0.85"
62068	4" width x 9-3/4" length	5-3/8" width x 11-3/8" length	0.85"
62069	4" width x 7-3/4" length	5-3/8" width x 10-1/8" length	1.37"
62070	3-3/4" width x 9-7/8" length	5-3/8" width x 12-1/8" length	1.37"

Visit DANCO.COM for Easy D.I.Y. Solutions