




INSTALLATION INSTRUCTIONS FOR DISHWASHER DISPOSAL CONNECTOR

Visit
DANCO.COM
for Easy D.I.Y. Solutions

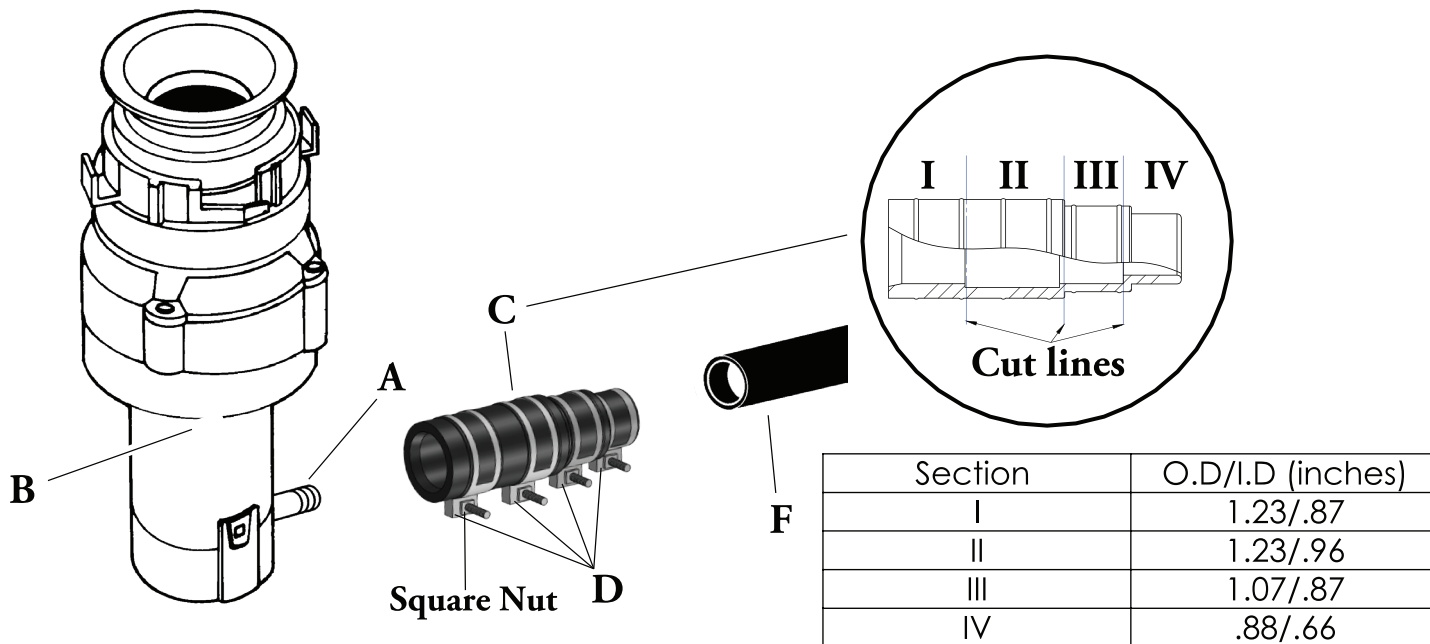

Instructions

Tools Required: Screwdriver, Utility Knife

1. Turn OFF power supply to disposal.
2. If using a new disposer, remove knock-out plug (plastic or metal) from dishwasher inlet (A) on garbage disposer (B). Refer to your garbage disposal manual/instructions on how to safely remove the knock-out plugs. If not using a new disposal then ignore Step 2 and move onto step 3. Note: be certain the knock-out plug is not left inside of the disposer.
3. If necessary, cut rubber adapter (C) at the required diameter to fit over the Dishwasher inlet (A). Refer to the cut-line image for specific dimensions of the adapter.
4. Slide the large end of rubber adapter (C) over the inlet (A) and attach it using the correctly sized clamp (D) included in this kit. Hold square nut in place and use a screwdriver to tighten the clamp down.
5. Clamp opposite end to dishwasher drain line (E) using the other appropriate clamp. Tighten the clamp down as previously mentioned.
6. Turn ON power supply to disposal and CHECK FOR LEAKS.

Instrucciones

Herramientas requeridas: Destornillador, cuchilla multiuso

1. APAGA la fuente de corriente del triturador.
2. Si usas un triturador nuevo, retira el tapón ciego (plástico o metálico) de la entrada del lavaplatos (A) en el triturador de desperdicios (B). Consulta el manual/instrucciones de tu triturador de desperdicios sobre cómo quitar los tapones ciegos de manera segura. Si no usas un nuevo triturador, ignora el paso 2 y continúa con el paso 3. Nota: asegúrate que el tapón ciego no quede dentro del triturador de desperdicios.
3. Si es necesario, corta el adaptador de hule (C) al diámetro requerido para que encaje sobre la entrada del lavaplatos (A). Consulta la imagen de la línea de corte para conocer las dimensiones específicas del adaptador.
4. Desliza el extremo grande del adaptador de hule (C) sobre la entrada (A) y fíjalo usando la abrazadera del tamaño correcto (D) incluida en este kit. Sostenga la tuerca cuadrada en su lugar y use un destornillador para apretar la abrazadera.
5. Sujeta el extremo opuesto a la línea de drenaje del lavaplatos (E) usando la otra abrazadera adecuada. Apriete la abrazadera como se mencionó anteriormente.
6. ENCIENDE la fuente de corriente del triturador y COMPRUEBA QUE NO HAYA FUGAS.