


## INSTRUCTIONS

### Removal of Old Parts

1. Turn **OFF** water supply to tub faucet.
2. Remove old **HOT** Handle by prying off Index Button (A), removing Screw (B) and lifting off Handle (C).
3. Remove Tube (D) by unthreading. Remove old Flange (E).
4. Repeat Steps 2 & 3 for **COLD** and **DIVERTER** Handles.
5. Unscrew **HOT** Stem (F), using Stem Removal Tool (supplied). Repeat for **COLD** and **DIVERTER** Valve Stems.
6. Insert Seat Wrench into faucet and turn counterclockwise to remove old Seats (G).
7. Discard all old parts.

### Installation of New Parts

1. Place new Seat (G) into faucet body and tighten with Seat Wrench. **Do Not Overtighten.** Repeat for other Seat.
2. Install new Faucet Stem (F) by threading into faucet body. **Do Not Overtighten.** Turn **ON** water supply to tub faucet. **CHECK FOR LEAKS.**
3. Install new Flange (E). Install new Tube (D) by threading onto Stem (F) and tightening to wall.
4. Replace Handle (C), securing with Screw (B). Replace Handle Cap (A).
5. Repeat for **COLD** and **DIVERTER** Valve Stems.
6. Turn **ON** water supply to tub faucet. **CHECK FOR LEAKS.**

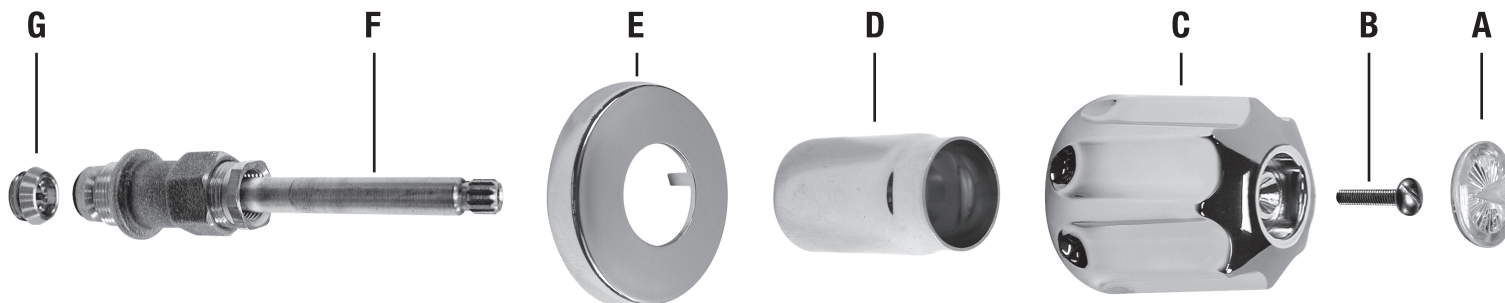

## Instrucciones

### Extracción de las Partes Usadas

1. **APAGAR** el agua que surte la llave de la bañera..
2. Retire la manija **CALIENTE** tirando del Botón Índice (A), quitando el Tornillo (B) y sacando la Manija (C).
3. Desenrosque y retire el Tubo usado (D). Retire la Brida usada (E).
4. Repita los pasos 2 y 3 para las Manijas **FRIO** y **DISPOSITIVO DESVIADOR**.
5. Desatornille el Vástago **CALIENTE** (F) con la Herramienta para Extracción del Vástago (suministrada). Repita los pasos para los Vástagos de las Válvulas **FRIO** y **DISPOSITIVO DESVIADOR**.
6. Inserte la Llave Inglesa en la canilla y gire en sentido contrario a las agujas del reloj para sacar los Asientos usados (G).
7. Deseche todas las partes usadas.

### Instalación de las Partes Nuevas

1. Coloque el Asiento nuevo (G) en la estructura de la fanilla y ajuste. **No Apretar Demasiado.** Repita para los otros Asientos.
2. Instale los Vástagos nuevos de la Canilla (F) enroscando en la estructura de la canilla. **No Apretar Demasiado. PRENDER** el agua que surte la llave de la bañera. **VERIFIQUE QUE NO HAY FUGAS.**
3. Instale la Brida nueva (E). Instale el Tubo nuevo (D) enroscando el Vástago (F) y afianzando a la pared.
4. Coloque la Manija (A) con el Tornillo de la Manija (B). Coloque el Botón Índice (A) encima de la Manija.
5. Repita los pasos para los Vástagos de las Válvulas **FRIO** y **DISPOSITIVO DESVIADOR**.
6. **PRENDER** el agua que surte la llave de la bañera. **VERIFIQUE QUE NO HAY FUGAS.**