


INSTRUCTIONS

Removal of Old Parts

1. Turn off water supply to tub faucet.
2. Remove old HOT handle by prying off handle cap (A), removing screw (B) and lifting off handle (C).
3. Remove tube (D) by unthreading. Remove old flange (E).
4. Repeat Steps 2 & 3 for COLD and DIVERTER handles.
5. Unscrew HOT stem (F), using stem removal tool (supplied). Repeat for COLD and DIVERTER valve stems.
6. Insert seat wrench into faucet and turn counter-clockwise to remove old seats (G).
7. Discard all old parts.

Installation of New Parts

1. Place new seat (G) into faucet body and tighten with seat wrench. **Do not over-tighten.** Repeat for other two seats.
2. Install new faucet stem (F) by threading into faucet body. **Do not over-tighten.** Turn on water supply to tub faucet and check for leaks.
3. Install new flange (E). Install new tube (D) by threading onto stem (F) and tightening to wall.
4. Replace handle (C), securing with screw (B). Replace handle cap (A).
5. Repeat for COLD and DIVERTER valve stems.
6. Turn on tub faucet. Check for leaks.

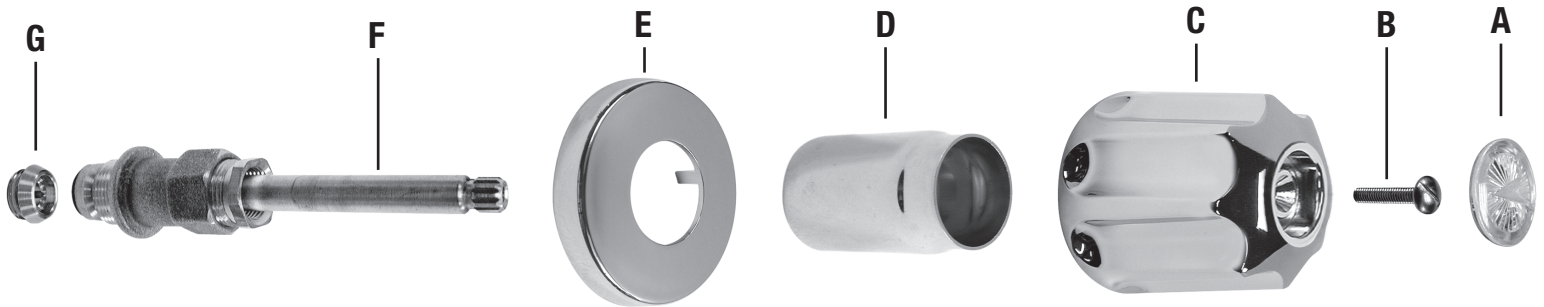

Instrucciones

Extracción de las Piezas Antiguas

1. Desconecte el suministro de agua para la canilla de la bañera.
2. Retire la manija CALIENTE tirando de la tapa de la manija (A), quitando el tornillo (B) y sacando la manija (C).
3. Desenrosque y retire el tubo anterior (D). Retire la brida usada (E).
4. Repita los pasos 2 y 3 para las manijas FRÍO y DISPOSITIVO DESVIADOR.
5. Desatornille el vástago CALIENTE (F) con la llave de tubo (suministrada). Repita los pasos para los vástagos de las válvulas FRÍO y DISPOSITIVO DESVIADOR.
6. Inserte la llave inglesa en la canilla y gire en sentido contrario a las agujas del reloj para sacar los asientos anteriores (G).
7. Deseche todas las piezas anteriores.

Instalación de las Piezas Nuevas

1. Coloque el nuevo asiento (G) en la estructura de la canilla y ajuste. No ajuste en exceso. Repita para los otros dos asientos.
2. Instale los nuevos vástago de la canilla (F) enroscando en la estructura de la canilla. No ajuste en exceso. Conecte el suministro de agua a la canilla de la bañera y verifique que no haya filtraciones.
3. Instale la nueva brida (E). Instale el tubo nuevo (D) enroscando el vástago (F) y afianzando a la pared.
4. Coloque la manija (A) con el tornillo de la manija (B). Coloque el tapón (A) encima de la manija.
5. Repita los pasos para los vástagos de las válvulas FRÍO y DISPOSITIVO DESVIADOR.
6. Abra la canilla de la bañera. Verifique que no haya filtraciones.