




# VERSASPRAY Tub Spout Shower Sprayers

ROCIADOR DE DUCHA CON ACOPLA AL CAÑO DE LA BAÑERA

Visit  
**DANCO.COM**  
for Easy D.I.Y. Solutions

## Installation Instructions

1. Ensure that hose clamp protective cap (G) is installed prior to placement of hose clamp (F) on spout adapter (A).
2. Position hose clamp (F) between the ribs on spout adapter (A). If hose clamp (F) is too small, twist knob to increase size. Firmly press spout adapter (A) on to tub spout (B) with the hose (C) pointed down. **HELPFUL HINT:** To make installation easier, soak spout adapter (A) in hot water for 5 minutes (allowing rubber to soften) or apply a small amount of hand soap to spout adapter (A).
3. Tighten hose clamp (F) until spout adapter (A) is secure to tub spout (B).  
(B). **WARNING: DO NOT OVERTIGHTEN HOSE CLAMP (F) AS THIS COULD DAMAGE THE TUB SPOUT (B).**
4. Attached spray head (D) to opposite end of hose (C) using included washer (E).

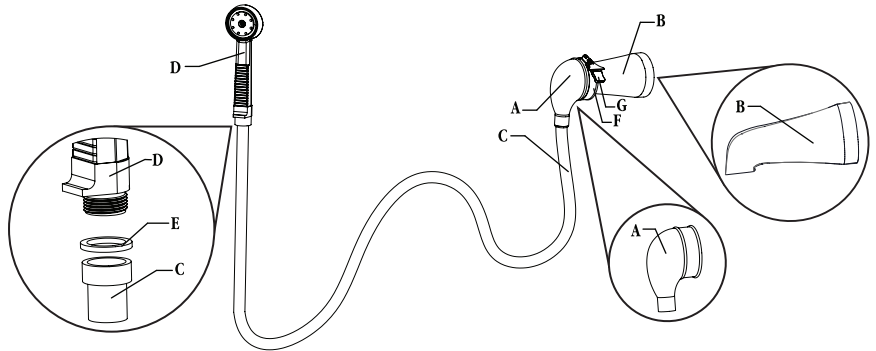

**ONLY FOR USE ON TUB SPOUTS WITHOUT DIVERTERS.  
SÓLO PARA USAR EN CAÑOS DE BAÑERA SIN DESVIADORES.**



**NOT FOR USE ON TUB SPOUTS WITH DIVERTERS.  
NO USAR EN CAÑOS DE BAÑERA CON DESVIADORES.**

## After Installation

1. Because all tub spouts are designed differently, we cannot guarantee that the VersaSpray™ will fit tightly to all tub spouts. Turn water on slowly to allow the pressure inside to increase gradually, preventing the VersaSpray™ from slipping off.
2. Prior to use, be sure that the VersaSpray™ remains securely in place during the hottest and highest flow conditions.
3. Loosen hose clamp (F) to remove VersaSpray™ from tub spout.
4. **WARNING: DO NOT OVERTIGHTEN HOSE CLAMP (F) AS THIS COULD DAMAGE THE TUB SPOUT. ENSURE THAT HOSE CLAMP PROTECTIVE CAP (G) IS INSTALLED. IF CAP (G) IS NOT INSTALLED THIS COULD RESULT IN BODILY INJURY (CUTS, ETC.).**

## Instrucciones de Instalación

1. Garantiza que la tapa protectora de abrazadera manguera (G) se instale antes de colocar la abrazadera de manguera (F) en el adaptador de caño (A).
2. Colocar la abrazadera de manguera (F) entre las varillas sobre el adaptador de caño (A). Si la abrazadera de manguera (F) es demasiado pequeña, hay que girar la perilla para incrementar el tamaño. Presionar firmemente el adaptador de caño (A) sobre el caño de la bañera (B) con la manguera Hose (C) apuntando hacia abajo. **CONSEJO ÚTIL:** Para facilitar la instalación, sumerge el adaptador de caño (A) en agua caliente por 5 minutos (para ablandar la goma) o aplícale un poco de jabón para las manos.
3. Aprieta la abrazadera de manguera (F) hasta que el adaptador de caño (A) quede bien asegurado al caño de la bañera (B). **ADVERTENCIA: NO APRETAR DEMASIADO LA ABRAZADERA DE LA MANGUERA (F) YA QUE ESTO PUDIERA DAÑAR AL CAÑO DE LA BAÑERA (B).**
4. Fijar el cabezal del rociador (D) al extremo opuesto de la manguera (C) usando la arandela incluida (E).

## Después de la Instalación

1. Puesto que los caños de bañera tienen diferentes diseños, no podemos garantizar que VersaSpray™ se ajustará bien a todos. Abre el suministro de agua despacio para permitir que la presión interior aumente gradualmente y evitar así que el VersaSpray™ se desacople.
2. Antes de usar, asegura que VersaSpray™ se mantiene firme en su lugar durante las condiciones de flujo más calientes y elevadas.
3. Aprieta la abrazadera de manguera (F) hasta que el adaptador de caño (A) quede bien asegurado al caño de la bañera (B).
4. **ADVERTENCIA: NO APRETAR DEMASIADO LA ABRAZADERA DE MANGUERA (F), YA QUE ESTO PUDIERA DAÑAR EL CAÑO DE LA BAÑERA. GARANTIZAR QUE LA TAPA PROTECTORA (G) DE LA ABRAZADERA DE MANGUERA ESTÉ INSTALADA. DE NO ESTARLO PUDIERAN SOBREVENIR LESIONES CORPORALES (CORTADAS Y OTRAS).**