


Universal Toilet Seat Bumpers

Replaces all styles

Topes del asiento del inodora

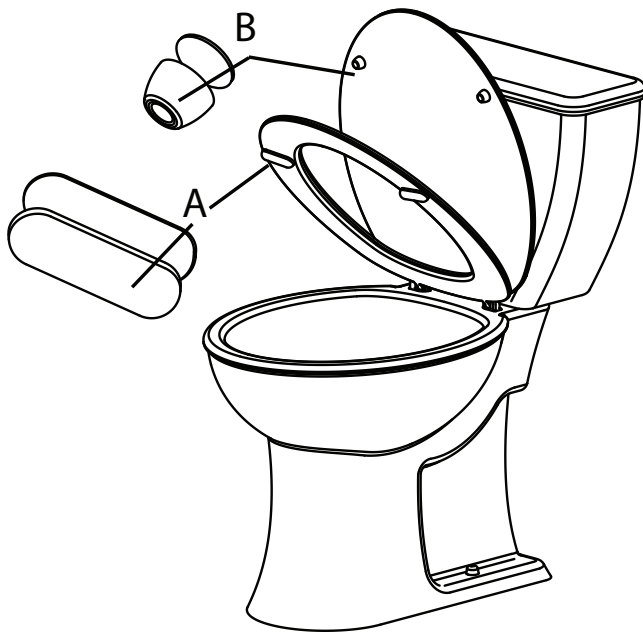

Instructions:

1. Remove existing toilet seat and lid bumpers from the underside of the toilet Seat and Lid. Thoroughly clean and dry area.
2. Remove paper backing from one side of the adhesive pad. Apply the custom fit adhesive pads to the Seat Bumpers (A) and the Lid Bumpers (B).
3. Remove paper backing and adhere the Seat Bumpers (A) to the underside of the Toilet Seat as shown. Firmly press in place.
4. Remove paper backing and adhere the Lid Bumpers (B) to the underside of the Toilet Lid as shown. Firmly press in place.

Note: Allow adhesive to sit for 24 hours before cleaning or exposing to moisture.

Instrucciones:

1. Retire el asiento actual del inodoro y los toques de la tapa de la parte inferior del Asiento y la Tapa del inodoro. Limpie y seque el área cuidadosamente.
2. Retire el papel protector de un lado de la almohadilla adhesiva. Aplique las almohadillas adhesivas a la medida a los Topes del Asiento (A) y los Topes de la Tapa (B).
3. Retire el papel protector y adhiera los Topes del Asiento (A) a la parte inferior del Asiento del Inodoro, como se muestra. Presione firmemente en su sitio.
4. Retire el papel protector y adhiera los Topes de la Tapa (B) a la parte inferior de la Tapa del Inodoro, como se muestra. Presione firmemente en su sitio.

Nota: Deje que el adhesivo se asiente durante 24 horas antes de limpiar o exponer a la humedad.