
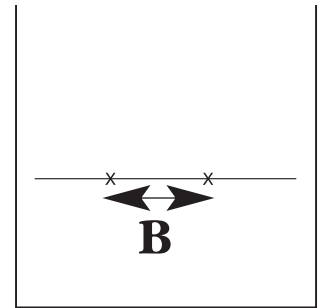


Instructions

Tools Required: Ruler, Pencil, Level, Drill, Wall Anchors with Screws, Screwdriver

1. Measure and mark the wall for the desired sink Height (A), making sure it is level.
2. Measure the distance between the mounting Slots (B) on the back of your sink. Mark the wall accordingly.
3. Place the Basin Hanger (C) against the wall and mark the Holes (D) in each hanger on the wall.
4. Drill holes that match the pattern in the hanger.
NOTE: If you do not hit a wall stud, you MUST use wall anchors (not included) to safely secure the sink.
5. Attach the basin hangers to the wall, using heavy screws (not included).
6. Place your sink over the hangers and test for sturdiness.
7. Your sink should have additional holes in the back flange. This will secure it to the wall and prevent it from riding up on the basin hangers. Mark the location of the holes on the wall.
8. Remove sink from hangers and drill holes. Insert wall anchors.
9. Re-hang your sink and attach it to the wall with screws.

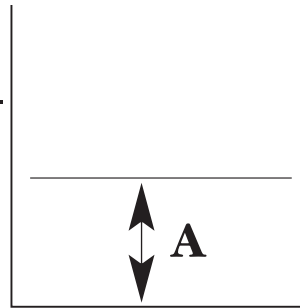

Instrucciones

Herramientas Necesarias: Regla, Lápiz, Nivel, Taladro, Anclajes de Pared con Tornillos, Destornillador

1. Mide y marca en la pared la altura donde deseas colocar el lavamanos (A).
2. Mide la distancia entre las ranuras de montaje (B) ubicadas en la parte posterior de tu lavamanos. Marca en la pared según corresponda.
3. Coloca el gancho del recipiente (C) contra la pared y marca los orificios (D) para cada gancho en la pared.
4. Taladra orificios en la pared de acuerdo al patrón del gancho.
NOTA: Si no encuentras una viga de pared, DEBES usar anclajes de pared (no incluidos) para fijar el lavamanos firmemente.
5. Coloca los ganchos del recipiente en la pared, con tornillos resistentes (no incluidos).
6. Coloca tu lavamanos sobre los ganchos y comprueba la estabilidad.
7. Tu lavamanos debe tener orificios adicionales en la brida posterior. Esto lo fijará a la pared y evitará que se deslice hacia arriba en los ganchos del recipiente. Marca la ubicación de los orificios en la pared.
8. Retira el lavamanos de los ganchos y taladra los orificios. Inserta los anclajes de pared.
9. Vuelve a colgar tu lavamanos y fíjalo a la pared con los tornillos.

