



OVERFLOW PLATE ASSEMBLY

CONJUNTO DE PALANCA DE PLACA DE REBOSE

Visit
DANCO.COM
for Easy D.I.Y. Solutions


DON'T FORGET MATCHING

Tub Spouts

Instructions

Tools Required: Screwdriver, Adjustable Wrench

1. Remove screws (A) from old overflow plate (B).
2. Detach plate from linkage (D) by removing cotter pin (C).
3. Attach new overflow plate to linkage (D).
4. Align screw holes on your new Danco overflow plate and thread screws into place. Tighten with a screwdriver.

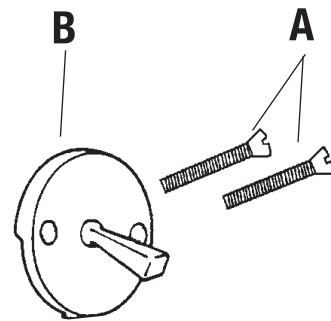

Instrucciones

Herramientas necesarias: destornillador, llave de tuercas regulable

1. Retirar los tornillos (A) de la placa usada de rebose (B).
2. Separar la placa de la articulación (D) retirando el pasador (C).
3. Fijar la nueva placa de rebose a la articulación (D).
4. Alinear los agujeros para tornillos en su nueva placa Danco de rebose y entornillar los tornillos en su sitio. Ajustar con un destornillador.

