



# TUB DRAIN LINKAGE ASSEMBLY



SE AJUSTA A CASI TODOS LOS DESAGÜES DE BAÑERA  
ENSAMBLAJE DE CONEXIÓN DE DESAGÜE DE BAÑERA

Visit  
**DANCO.COM**  
for Easy D.I.Y. Solutions

## Instructions

**Tools Required:** Screwdriver

1. Remove screws (A) from face plate.
2. Pull old face plate away from the tub with old link & plunger assembly (C) attached.
3. Remove cotter pin (D) and old assembly.
4. Compare length of the new link & plunger assembly to that of the old. Move upper arm (E) to the right hole to adjust length of the new assembly if necessary.
5. Attach assembly to face plate with cotter pin (D).
6. Replace face plate.

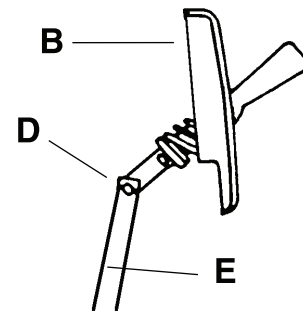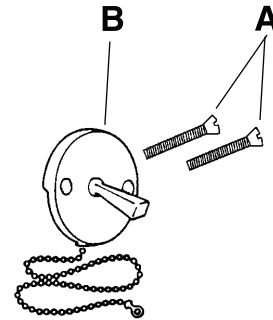

## Instructions

**Herramientas Requeridas:** Destornillador

1. Retire los tornillos (A) de la placa (B).
2. Remueva la placa usada de la banera con el conjunto usado de eslabón y pistón (C) unidos a ella.
3. Retire el pasador de chaveta (D) y el conunto usado.
4. Compare la longitud del nuevo conjunto de eslabón y pistón con la del antiguo. Mueva el brazo superior (E) al agujero de la derecha para ajustar la longitud del nuevo conjunto, si fuese necesario.
5. Fije el conjunto a la palanca de la placa con el pasador de chaveta (A).
6. Vuelva a colocar la placa.

