




1-HOLE OVERFLOW PLATE W/SCREW

PLACA PARA REBOSADERO UN SOLO ORIFICO CON TORNILLADOR

Visit
DANCO.COM
for Easy D.I.Y. Solutions

DON'T FORGET MATCHING
Tub Spouts

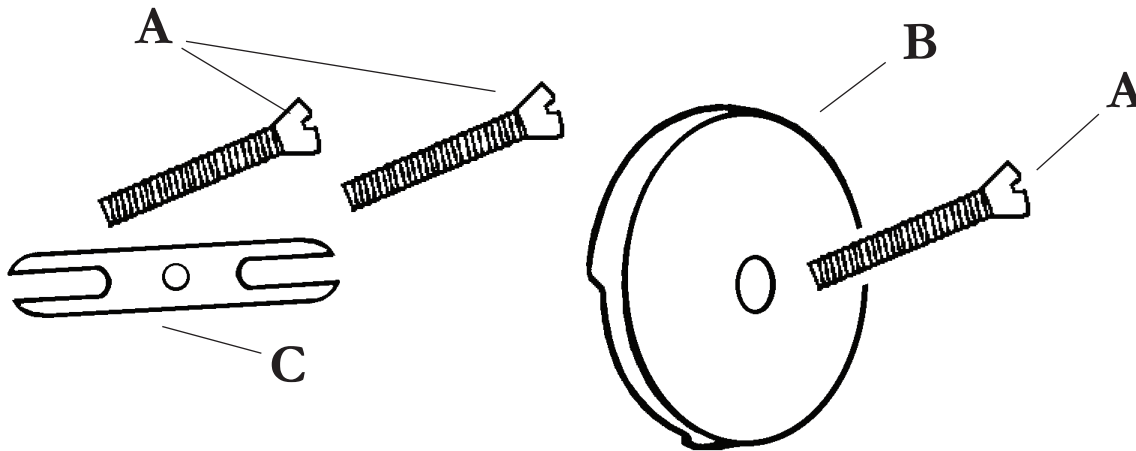

Instructions

Tools Required: Screwdriver

1. Remove screw (A) from old overflow plate (B) and retain.
2. If replacing a 2-hole plate, align slots in adapter (C) to screw holes in drain. Attach using screws from old plate (A) to hold adapter in place.
3. Align screw hole on your new overflow plate (B) and thread screw (A) into place. Tighten with a screwdriver.

Instrucciones

Herramientas necesarias: destornillador

1. Retire los tornillador (A) de la placa usada del rebosadero (B) y conserve.
2. Si substituye una placa 2-hole, alinee las ranuras en el adaptador (C) para atornillar los orificios del drenaje. Ajuste usando tornillos de la vieja placa (A) para sujetar el adaptador en su lugar.
3. Alinie los agujeros para tornillo en su nueva placa para rebossadero (B) y enrosque los tornillo (A) en su sitio. Ajuste con un destornillador.