




Instructions for Twisterbolts™ 88883

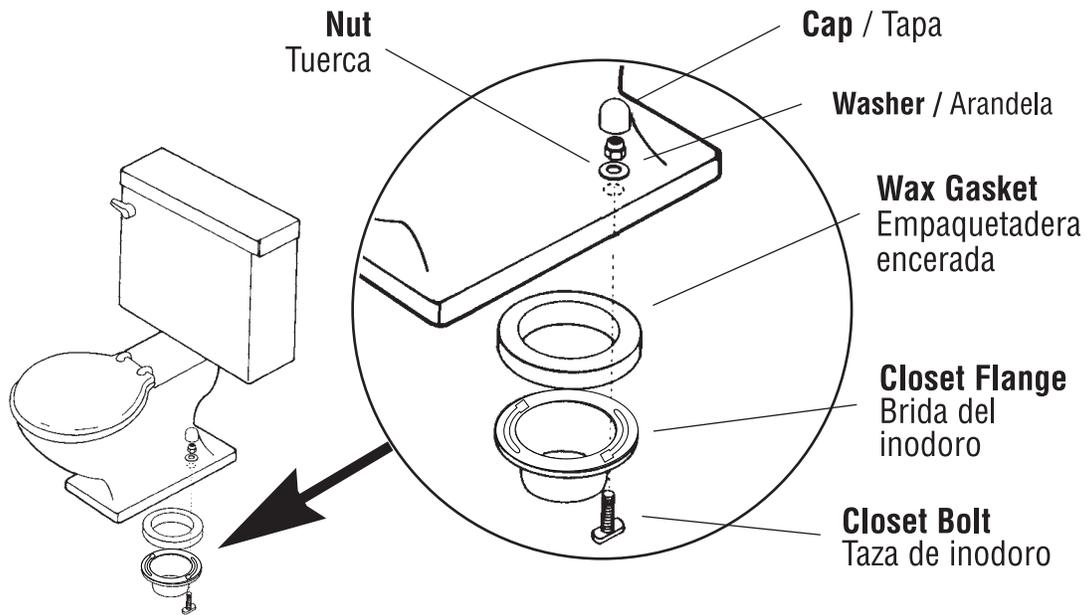

INSTRUCTIONS

TOOLS REQUIRED: Adjustable Wrench, Hacksaw

1. Insert bolts into flange with thread facing up. The bolt goes into a keyed opening in the flange from the top side. Slide square retainer washer down bolt to hold it upright.
2. Align holes in bowl with closet bolts and push nylon speed nut down to flange to hold bolt in place. Make sure wax ring is installed before installing bowl. Carefully lower bowl into place.
3. Assemble metal washer and nut to closet bolt and tighten. Break off or cut off at perforation if required.
4. Screw cap onto bolt.

INSTRUCCIONES

HERRAMIENTAS NECESARIAS: Llave ajustable, Sierra de arco

1. Insertar los pernos en la brida con la rosca hacia arriba. El perno entra en una abertura enchavetada en la brida desde el lado superior. Desliza la arandela cuadrada de retención hacia abajo para mantener el perno en posición vertical.
2. Haga coincidir los agujeros en la taza con los pernos del inodoro y baje la taza con cuidado. Asegúrese de que la arandela esté encerada antes de instalar la taza.
3. Ensamble la arandela de metal y tuerca en el perno de inodoro y apriete. Corte o rompan por la perforación si es necesario.
4. Atornillar el tapón en el tornillo.