



INSTALLATION INSTRUCTIONS FOR TUB/SHOWER REMODELING KIT FOR UNION BRASS®

Visit
DANCO.COM
for Easy D.I.Y. Solutions


Instructions

Removal of Old Parts

1. Turn **OFF** water supply to tub faucet.
2. Remove old **HOT** handle by removing Screw (A) and lifting off Handle (B).
3. Remove old Flange (C) and Nipple (D) by unthreading.
4. Repeat Steps 2 & 3 for **COLD** Handle.
5. Unscrew **HOT** Stem (F), using Stem Removal Tool (supplied). Repeat for **COLD** Valve Stem.
6. Insert Seat Wrench into faucet and turn counterclockwise to remove old Seats (G).
7. Discard all old parts.

Installation of New Parts

1. Place new Seat (G) into faucet body and tighten. **Do Not OverTighten.** Repeat for other seat.
2. Install new Faucet Stem (F) by threading into faucet body. **Do Not Overtighten.** Turn **ON** water supply to tub faucet. **CHECK FOR LEAKS.**
3. Install new Nipple (D) by threading into Bonnet Nut (F) on Stem. Install new Flange (C) by threading onto Nipple (D) and tightening to wall.
4. Install new Handle (B), securing with Screw (A).
5. Repeat for **COLD** Valve Stem.
6. Turn **ON** water supply to tub faucet. **CHECK FOR LEAKS.**

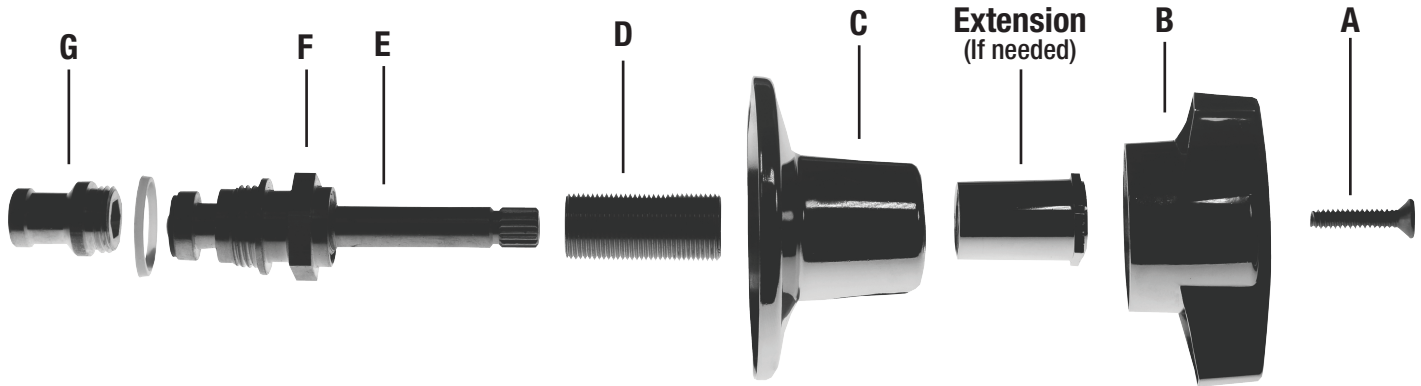

Instrucciones

Extracción de las Partes Usadas

1. **APAGAR** el agua que surte la llave de la bañera..
2. Retire la Manija **CALIENTE** quitando el Tornillo (A) y sacando la Manija (B).
3. Desenrosque y retire la Brida usada (C) y la Boquilla (D).
4. Repita los pasos 2 y 3 para la Manija **FRIO**.
5. Desatornille el Vástago **CALIENTE** (E) con la Herramienta para Extracción del Vástago (suministrada). Repita los pasos para el Vástago de la Válvula **FRIO**.
6. Inserte la Llave Inglesa en la canilla y gire en sentido contrario a las agujas del reloj para sacar los Asientos usados (G).
7. Deseche todas las partes usadas.

Instalación de las Partes Nuevas

1. Coloque el asiento nuevo (G) en la estructura de la canilla y ajuste. **No Apretar Demasiado.** Repita para el otro Asiento.
2. Instale los Vástagos nuevos de la Canilla (E) enroscando en la estructura de la canilla. **No Apretar Demasiado. PRENDER** el agua que surte la llave de la bañera. **VERIFIQUE QUE NO HAY FUGAS.**
3. Instale la Boquilla nueva (D) enroscando en la Tuerca Tapa (F) del Vástago. Instale la Brida nueva (C) enroscando en la Boquilla (D) y afianzando a la pared.
4. Instale la Manija neuva (B) con el Tornillo de la Manija (A).
5. Repita para el Vástago de la Válvula **FRIO**.
6. **PRENDER** el agua que surte la llave de la bañera. **VERIFIQUE QUE NO HAY FUGAS.**