




# INSTALLATION INSTRUCTIONS FOR SNAP-IN SHOWER STRAINER

Visit  
**DANCO.COM**  
for Easy D.I.Y. Solutions

## Instructions

**Tools Required:** Small Screwdriver

1. Insert small screwdriver into one of the holes in old Strainer (A) and pry off Strainer.
2. Install replacement Strainer by pushing firmly into Drain Opening (B).

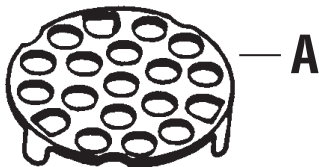

## Instrucciones

**Herramientas necesarias:** Destornillador Pequeño

1. Insertar el destornillador pequeño en uno de los agujeros del cedazo usado (A) y remover el cedazo.
2. Instalar el cedazo de repuesto presionando firmemente en la abertura del dren (B).

