




# INSTALLATION INSTRUCTIONS FOR FAUCET SEAT WRENCH

Visit  
**DANCO.COM**  
for Easy D.I.Y. Solutions

## Instructions

Tools Required: Hammer

1. Turn off water supply to faucet (A).
2. Remove stem.
3. Insert proper size end of wrench (B) into seat (C).
4. Apply counter-clockwise pressure while tapping with hammer.
5. Unscrew seat.
6. Use tool to install new seat.

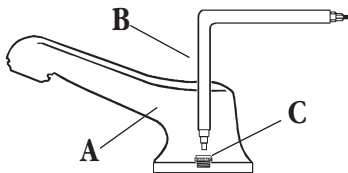

## Instrucciones

Herramientas requeridas: martillo

1. Cortar el suministro de agua al grifo (A).
2. Quitar el vástago.
3. Inserte el extremo apropiado de la talle de la llave (B) en asiento (C).
4. Aplique la presión a la izquierda mientras que golpea ligeramente con el martillo.
5. Desatornille el asiento.
6. Utilice la herramienta para instalar el nuevo asiento.